


Product Manual

NOFEN Set A40

- ① NOFEN CR-100A
- ② NOFEN P-400A
- ③ NOFEN CS-30

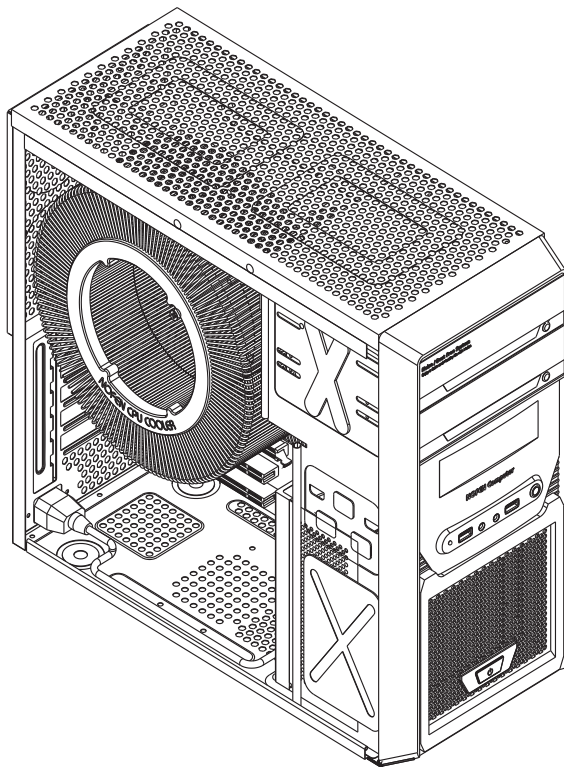


Please read the manual before installing.
v.1.1 (Feb. 2011)

Contents

1. Nofen Set A40 Components	1
2. Nofen Set A40 Features	1
3. CPU Cooler CR-100A	2
4. Power Supply P-400A	6
5. Case CS-30	9
6. Nipple and Backplate Installation on M/B	11
7. Motherboard Installation into Case	12
8. Installing the CPU Cooler	13
9. Cooler Fixing Holes for INTEL and AMD	14
10. CPU Cooler Installation Direction	14
11. Cooler Performance Comparison Chart	15
12. Solution for CPU Fan Error During Booting	15
13. Recommended Noise-Free Components	16
14. Warranty and Servicing	17

1. NOFEN Set A40 Components

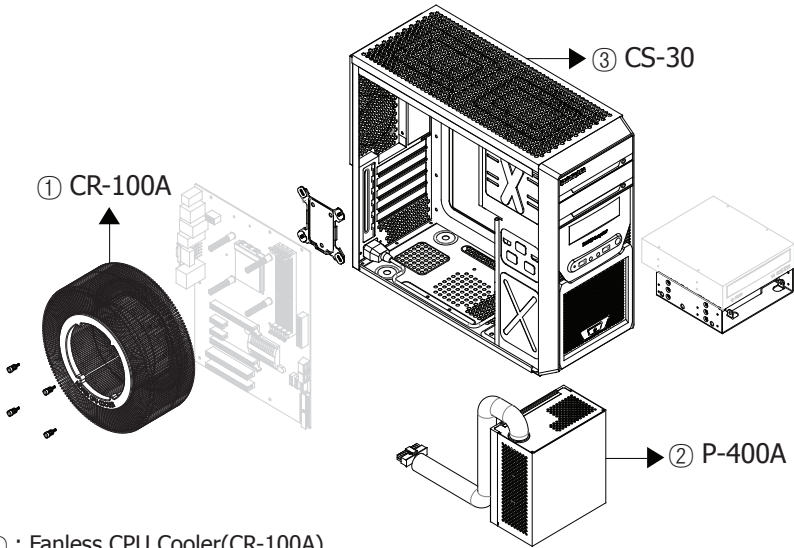

- ① : Fanless CPU Cooler(CR-100A)
- ② : Fanless Power Supply(P-400A)
- ③ : Fanless Case(CS-30)

※ For details regarding components, please refer to their respective manual sections.

2. NOFEN Set A40 Features

1. NOFEN's patented FDP(Fluid Dynamic Pressure) technology eliminates noise and vibration.
2. All components are fanless, allowing systems optimized for natural convection cooling.
3. Numerous vents facilitate effective cooling of not only the CPU cooler, but the PSU as well.
4. Built only with ICEPIPEs and heat pipes, both super thermal conductors, heat generated in the system is effectively transferred out of the system.
5. Absolutely no fans are utilized, significantly reducing internal dust accumulation and making it possible to maintain system cleanliness.
6. Significant reduction in the accumulation of dust also reduces the chances for accumulation of bacteria that may cause skin or respiratory problems.
7. Always silent, making it ideal for those that are sensitive to noise.

3. CPU Cooler NOFEN CR-100A



CR-100A Features

1. NOFEN's patented FDP(Fluid Dynamic Pressure) technology eliminates noise and vibration.
2. The entirely fanless, patented technology based, tunnel-type CPU cooler is optimized for natural convection cooling.
3. Designed for fast cooling through the 4 heat pipes and 160 ICEPIPES.
4. The wide spacing of ICEPIPES prevents dust accumulation related maintenance.
5. The world's first absolutely silent cooler with no cooling fan.

CR-100A Specifications


Spec.	Model	CR-100A
Materials		Pure copper, aluminum
Weight (g) – CPU Cooler		763 g
Resistance (°C/W @ 100W)		0.48
Dimensions(mm)		226(D) X 136.6(H)
Heat Dissipation Area (cm ²)		2,829 cm ²

CR-100A Patent Information

- ⊙ Patent registered in Korea.
- ⊙ Patent pending in 20 countries including the US, EU, China, and Japan.

CR-100A Components


1. Common Components for INTEL & AMD

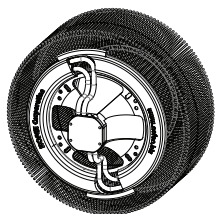


① CPU Cooler (CR-100A) x 1




② Thermal Grease x 1

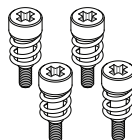


③ CPU Fixing Bolts x 4

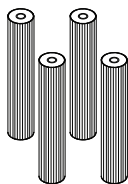

④ Nipples x 4

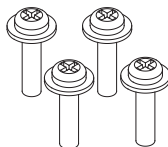


⑤ Nipples Fixing Bolts x 4

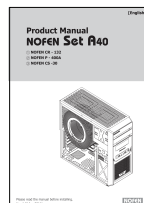


⑥ Product Manual x 1

2. Components for INTEL Only

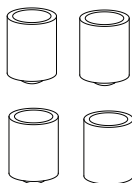

⑦ Guide Bushings x 4

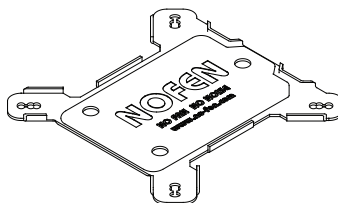

⑧ Backplate x 1


CR-100A Supported Sockets and CPUs

	SOCKET	CPU
INTEL Sockets	1155 1156 775	Pentium G Core i7 2K CORE i5 / i5 2K CORE i3 / i3 2K CORE 2 Duo / Quad / Extreme Pentium D / Celeron D
AMD Sockets	939, 940 AM2, AM2+ AM3	PHENOM II PHENOM ATHLON64 ATHLON X2 ATHLON FX ATHLON 64 FX SEMPRON


CR-100A Installation Conditions

NOFEN CR-100A is designed to not use the First PCI Express Slot, but can use second PCI Express Slot.

Second PCI Slot First PCI Slot

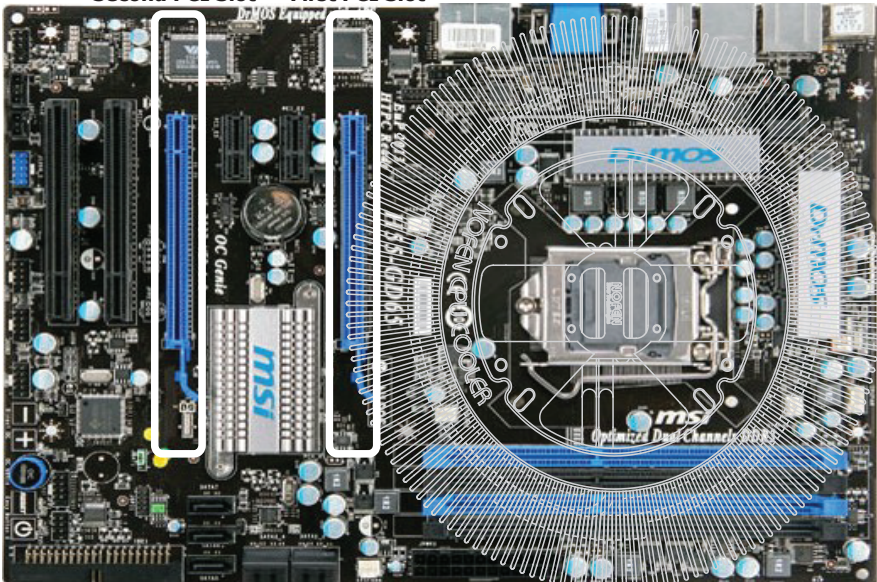


4. Power Supply NOFEN P-400A

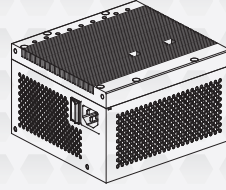

P-400A Features

1. Fanless power supply for absolute silent operation.
2. 80PLUS BRONZE certified high efficiency performance.
3. Stable operation reinforced by 560W-class components.
4. Large aluminum heatsink customized for natural convection.

P-400A Components

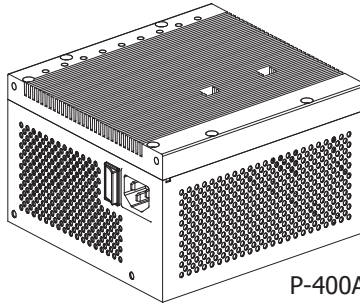


P-400A Fanless Power Supply


P-400A Precautions

1. The motherboard can be damaged if the Main Output Connector(P1) is connected to the motherboard while the AC power is ON.
2. While connecting the DC output connectors, be sure to connect them in the correct directional orientation.
3. After installation, press the case's power button then check if the Power LED lights ON, for if it does not, it may be necessary to check for incorrect connections or motherboard problems.


P-400A Connectors

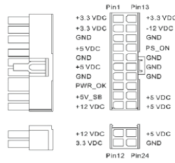


Main Power Connector
(P1)

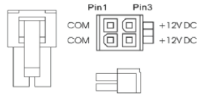


+12V Power Connector

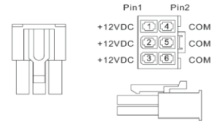

+12V PCI Express Connector

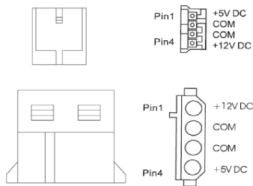

Peripheral Power Connector

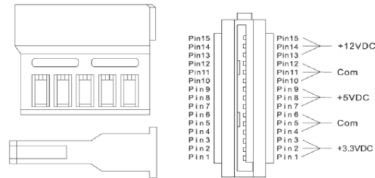

Serial ATA Power Connector

P-400A Specifications

AC Input Range	Voltage	110 – 240 VAC		Output Voltage Stability	Output Voltage	Safety Range							
	Frequency	50 – 60 Hz			+ 3.3 V	3.76 – 4.8 V							
PFC Type	ACTIVE PFC				+ 5 V	5.6 – 7.0 V							
Efficiency(%)	TYPICAL LOAD(50%)	86 %			+ 12 V1	13.0 – 16.5 V							
	FULL LOAD (100%)	85 %			- 12 V2	13.0 – 16.5 V							
DC Output	Output Voltage	Output Load Range			Total Output	Safety Features							
		Imin	Inor			Imax	Over Current Protection (OVP)						
	+3.3 V	0.0 A	10 A		20.0 A	130 W	Over Current Protection (OVP)						
	+5 V	0.0 A	7.0 A		14.0 A		Short Circuit Protection (SCP)						
	+12 V1	0.2 A	7.0 A		14.0 A	324 W	External temperature		External moisture				
	+12 V2	0.2 A	6.5 A	13.0 A	Operation		Storage	Operation	Storage				
	-12 V	0.0 A	0.25 A	0.5 A	18.5 W	0 – 45°C		-20 – 60°C		5 – 95%RH		5 – 95%RH	
	+5 Vsb	0.0 A	1.25 A	2.5 A		Dimensions		160 x 150 x 86 mm					

P-400A Certifications and EMI



P- 400A Warning and Cautionary Notices

WARNING

Neglecting the following may cause serious injury or death.


- ▶ Do not disassemble the cover while the AC power is connected, for it may lead to electrical shock or fatal product damage.
- ▶ Do not touch the power plug with wet hands, for it may lead to electrical shock.
- ▶ Do not insert fingers or metal objects into vents.

Caution

Neglecting the following may cause minor injuries, degrade product conditions or cause malfunctions.

- ▶ Operating the product in an extremely cold or hot environment can degrade product performance and lifespan.
- ▶ Do not insert water or liquids inside the product.
- ▶ Operation in a humid or non-ventilated environment may reduce product lifespan.

5. Case NOFEN CS-30

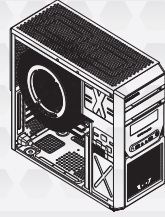


CS-30 Features

1. Optimized for fanless natural convection cooling.
2. Significantly reduces dust accumulation in the system.
3. Significantly reduces vibration during system operation.
4. Convertible Bays (5.25"/3.5"/2.5") for additional HDD & SSD drives.

CS-30 Specifications

Category	NOFEN CS-30
Dimensions (W x D x H)	172mm x 415mm x 380mm
Weight	2.7 kg
Materials	Plastic, steel(SGCC)
Supported Form Factors	ATX, Micro ATX
Color	Black
VGA	Second PCI-Express
Expansion Slots	6
5.25" Bays	1
5.25" to 3.5"/2.5" Converting Bay	1
3.5" – 2.5" converting bay	1(Optional)
Front I/O Port	Mic x 1, Headphones x 1, USB 2.0 x 2

CS-30 Components

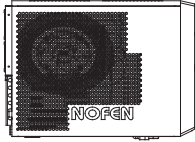

① CS-30 Case



② SSD Fixing Screws x 4
(M3.0x8)



③ HDD Fixing Screws x 4
(UNC 3 32x6)




④ SATA Cable x 1
(Angular Connector)



⑤ Washer Fixing
Screws x 9(M3.0x6)




⑥ Cardboard Washers x 9

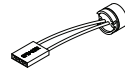


⑦ Internal Speaker

Please install Cardboard Washers(⑥) between motherboard and Washer Fixing Screws(⑤).

CS-30 Front I/O Port and 3.5"/2.5" SSD Converting Bay Port

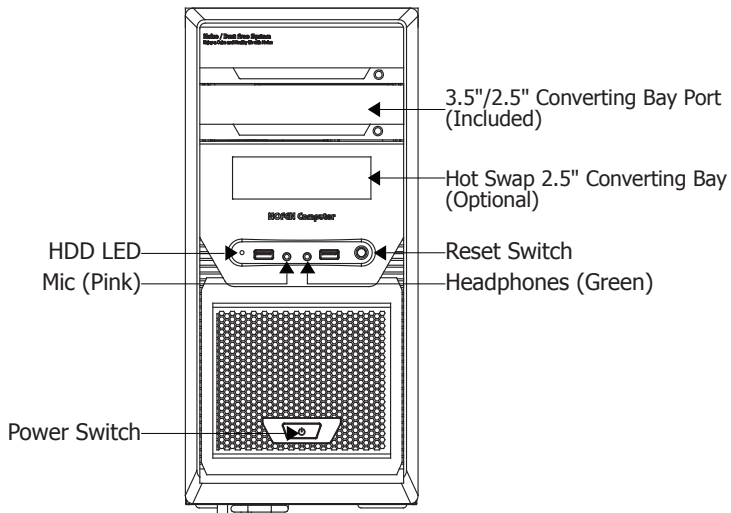

3.5" & 2.5" Converting Bay (Included)

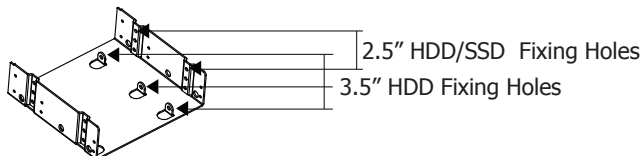


6. Nipple and Backplate Installation on Motherboard

Please refer to flash video at "www.nofencomputer.com" for the detailed explanation.


1. Intel CPUs

1. Align the Nipples, Guide Bushings, and Backplate with the motherboard's CPU cooler installation holes as shown in the diagram.
2. Fasten the Nipples, Guide Bushings, and Backplate to the motherboard by screwing in each of the Nipple Fixing Bolts through the assembly to their respective Nipples.

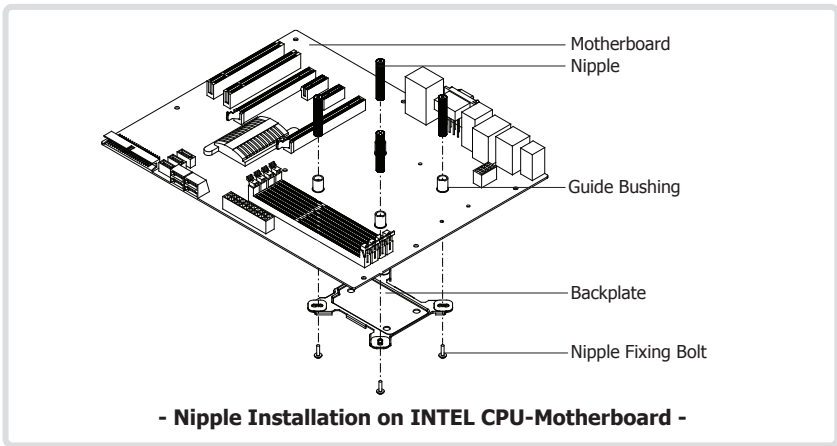

2. AMD CPUs

1. Remove the original screws of the motherboard's retention guide.
2. Align the Nipples, retention guide, and backplate with the motherboard's retention guide installation holes as shown in the diagram.
3. Fasten the Nipples, retention guide, and backplate to the motherboard by screwing in each of the Nipple Fixing Bolts through the assembly to their respective Nipples.


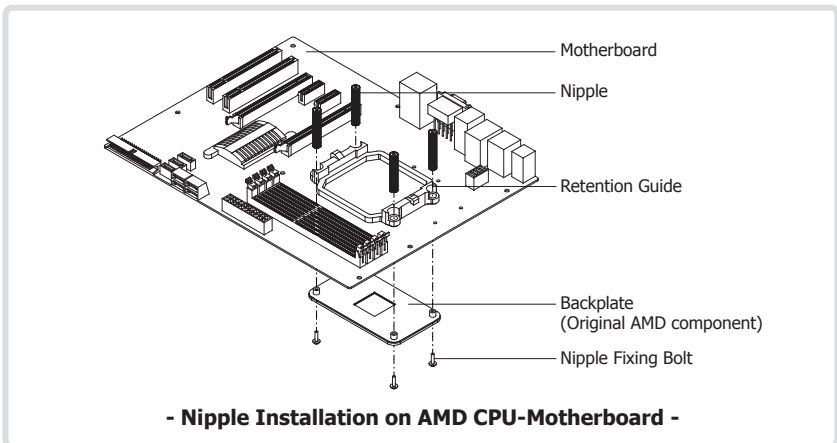


7. Motherboard Installation into Case


CAUTION: Before installing the motherboard, refer to the cautionary notice below regarding pre-installed Stand-offs for ATX motherboards and required adjustments for Micro-ATX motherboards.

1. Install the motherboard into the case and connect the Main Power and CPU Power onto the motherboard.
2. Connect the wires/connectors of the Power Switch, I/O Port, USB, and Audio according to the motherboard's manual.
3. Remove the 5.25" Converting Bay from the case, then install the HDD or SSD as shown in the diagram below, and connect their power cables.

* For a list of supported graphics cards, please refer to NOFEN's website (www.nofencomputer.com)

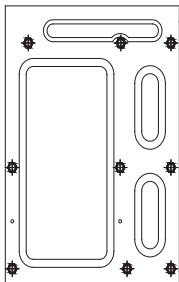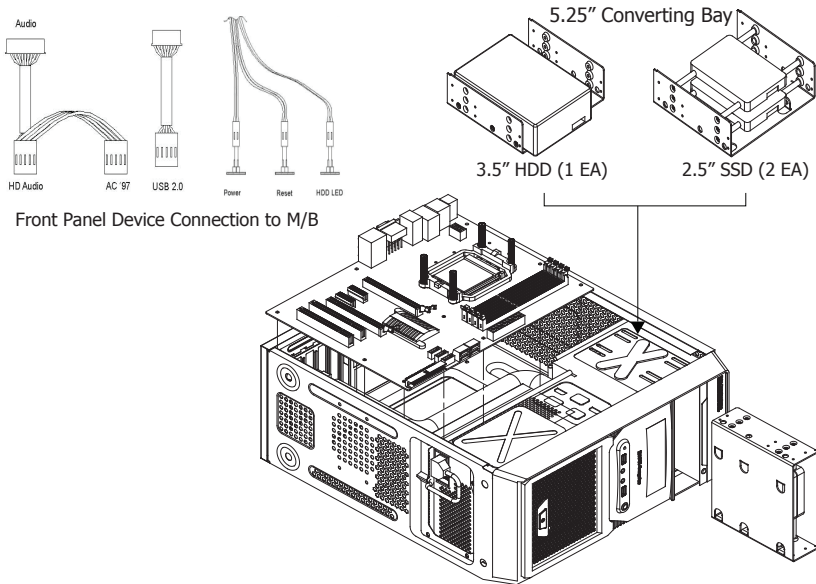

Stand-offs for ATX

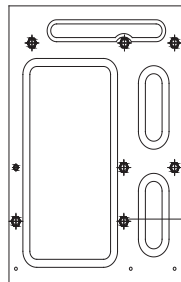

Stand-offs for Micro-ATX


⚠ CAUTION

- Stand-offs are pre-installed for ATX Standard Form Factor Motherboards.
- Micro-ATX motherboards require adjustments of the Stand-offs according to the diagram.




8. Installing the CPU Cooler

1. Remove any foreign materials from the surface of the CPU.
2. Apply a thin layer of the included Thermal Grease on the surface of the CPU.
3. Align the 4 Fixing Holes(refer to p.14) of the CPU Cooler with the 4 Nipples.
4. Install the CPU Fixing Bolts to fix the CPU Cooler on the motherboard.

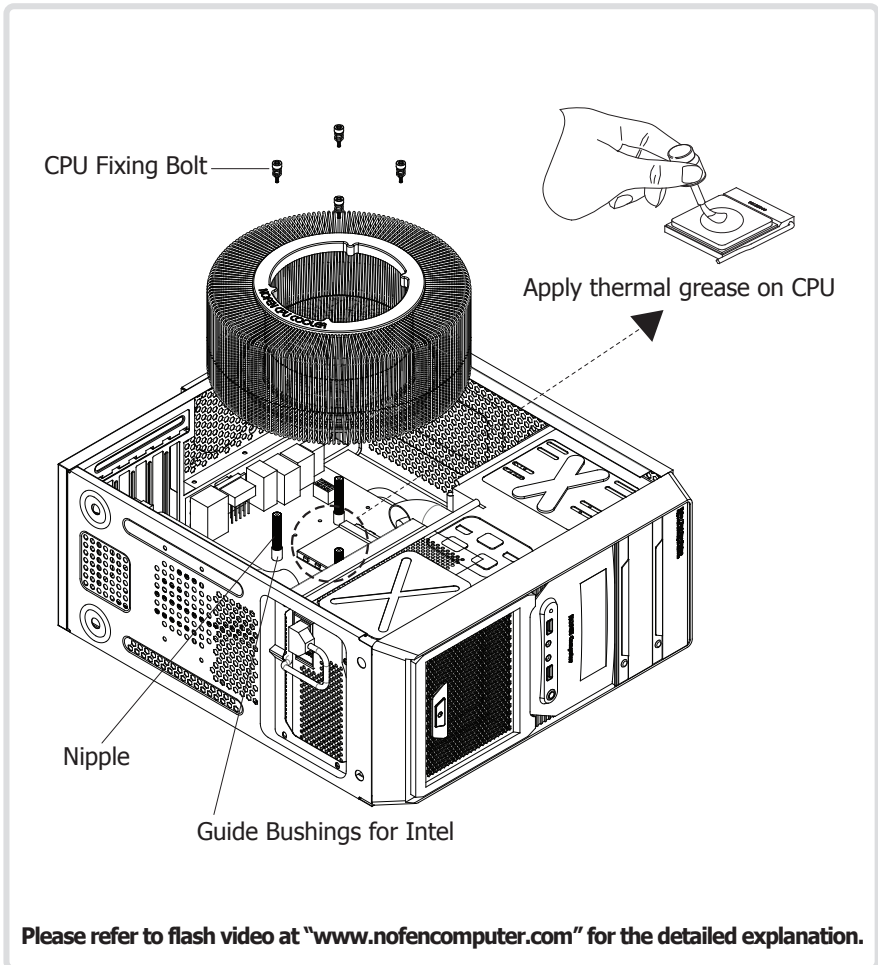


Please refer to flash video at "www.nofencomputer.com" for the detailed explanation.


9. Cooler Fixing Holes for INTEL & AMD

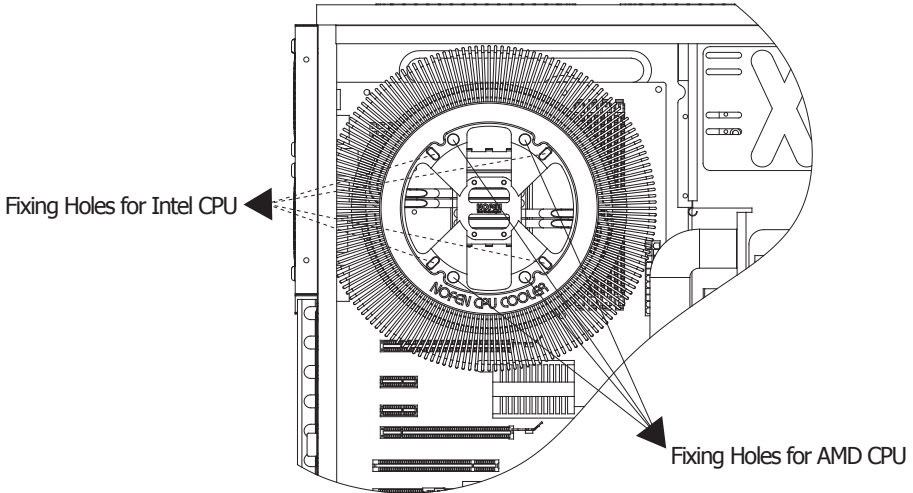

10. CPU Cooler Installation Direction

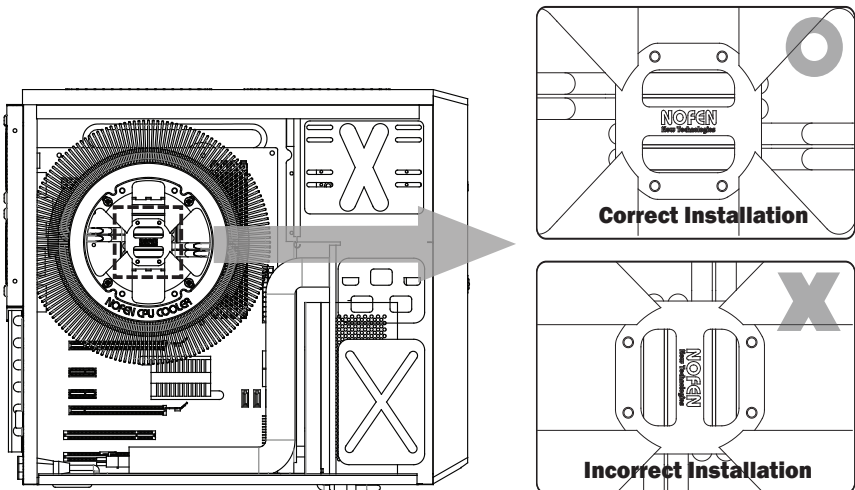


11. Cooler Performance Comparison Chart

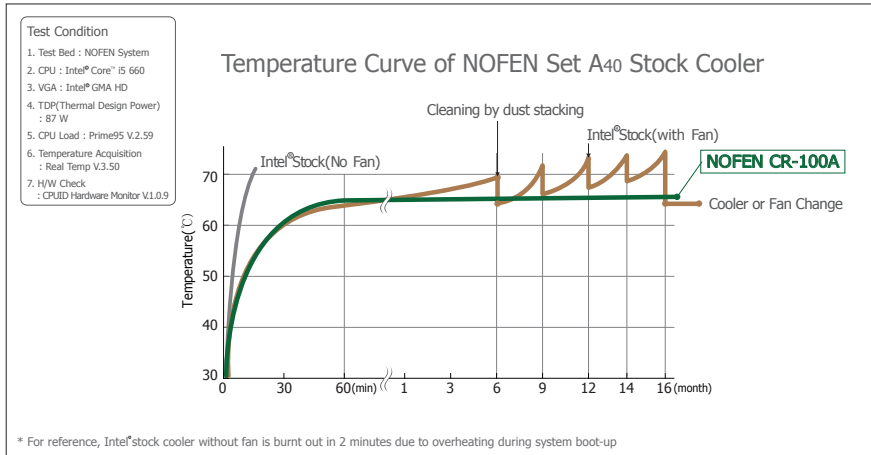

12. Solution for CPU Fan Error During Booting : AMI BIOS


Solution 1.

Power – Set “CPU Fan Speed” to “Ignored” in the Hardware Monitor menu.

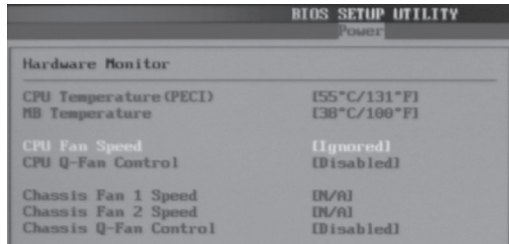

Solution 2.

Boot – Set “Wait For ‘F1’ If Error” to “Disabled” in the Boot Settings Configuration menu.

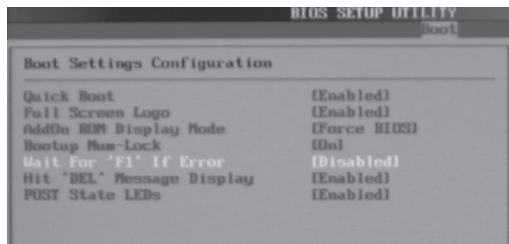

13. Recommended Noise-Free Components

► Intel System


For the latest updated information, please refer to NOFEN's website

Recommend Component	Manufacturer	Model
1.CPU	Intel Corporation	Intel® Core™ i5-661-Clarkdale
2.CPU Cooler	NOFEN Corporation	CR-100A
3.Chassis	NOFEN Corporation	CS-30 & CS-60
4.Motherboard	Micro-Star Int'l Co., Ltd.	H55-GD65(ATX) / H55M-E33(M-ATX)
5.VGA Card	Sapphire Technology Limited	Radeon HD 5450 HM D2 512MB LP
6.Power Supply	NOFEN Corporation	P-400A
7.Solid State Disk	Samsung Electronics Co., Ltd.	S-470 series 2.5" 64GB SSD(MZ-5PA640/000)

Optimal Components for Building a NOFEN Computer System



1.CPU

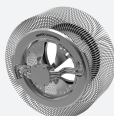

2.CPU Cooler



3.Chassis



4.Motherboard



5.VGA Card



6.Power Supply



7.Solid State Disk

► AMD System


For the latest updated information, please refer to NOFEN's website

Recommend Component	Manufacturer	Model
1.CPU	Advanced Micro Devices, Inc.	Phenom II-X6 1055T (Thuban 95W)
2.CPU Cooler	NOFEN Corporation	CR-100A
3.Chassis	NOFEN Corporation	CS-30 & CS-60
4.Motherboard	AsusTek Computer Inc.	ASUS M4A88TD-V EVO/USB3
5.VGA Card	Sapphire Technology Limited	Radeon HD 5450 HM D2 512MB LP
6.Power Supply	NOFEN Corporation	P-400A
7.Solid State Disk	Samsung Electronics Co., Ltd.	S-470 series 2.5" 64GB SSD(MZ-5PA640/000)

Optimal Components for Building a NOFEN Computer System



 1.CPU



2.CPU Cooler



3.Chassis



4.Motherboard



5.VGA Card



6.Power Supply




7.Solid State Disk

14. Warranty and Servicing

1. Warranty Period: 1 year from date of purchase
2. Free Servicing: Free Servicing will be provided for defects reported within the Warranty Period. However, Free Servicing is not provided in the following cases:
 - Problems caused by neglecting the warnings and notices of this manual.
 - Damages or deformations caused by the user's intent, fault, or lack of caution.
 - Deformations or malfunctions caused by the user's modification of the product.
 - Damages to the computer or its components caused by excessive over-clocking.
3. Charged Servicing: Charged Servicing is available for problems reported beyond the Warranty Period.
4. Refund and Exchange
 - 1) Refund : A Refund is only available if returned to the original retailer with a valid sales receipt within 10 days of purchase, and the product/packaging are not damaged.
 - 2) Exchange : If the product shows deterioration or malfunctions within 30 days of purchase, the product can be exchanged for a new product.

© Company Headquarters
#1312, Byucksan 6-cha, Gasan-dong 481-4, Geumcheon-gu, Seoul, Korea
Phone : +82-2-2627-3550 Fax : +82-2-2627-3555 <http://www.nofencomputer.com>

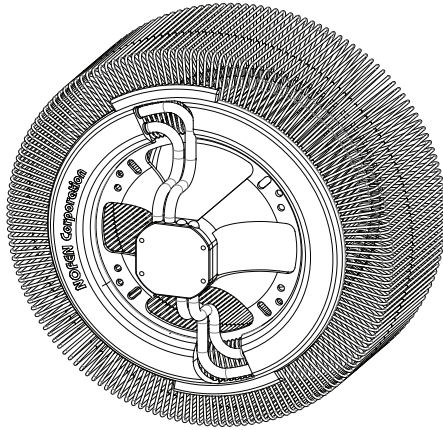

NOFEN CR-100A