



SMART DRIVE NEO MANUAL

STEP 1

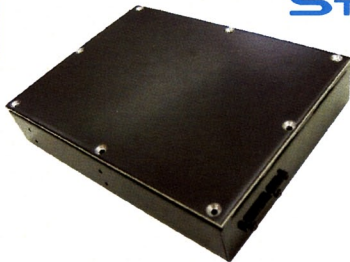

Take the 8 screws out from the top


STEP 2

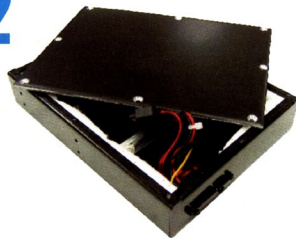

Check all the contents inside:(below)


- ① SMART DRIVE NEO BODY
- ② SMART DRIVE NEO TOP
- ③ Heat conduction sheets (x6)
- ④ Screws for Smart Drive NEO (x4)
- ⑤ Screws for Smart Drive NEO (x4)

STEP 3

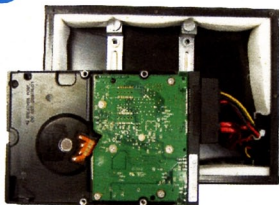


Connect the cable, then Place the HDD up side down on the dumpers in the middle. No need to screw it.

STEP 4

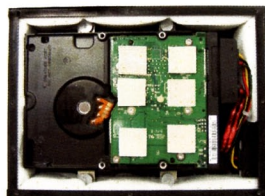

This is the sample of placing the conduction sheets. Place them on PINs and IC chips. adhesion side will be facing on top cover.

STEP 5

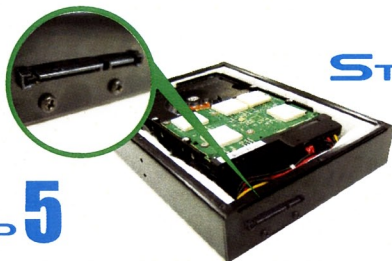

Be careful that HDD cable is connected completely before you close the top. Cable should not get any pressure by closing the top

STEP 6



Back the top cover and screws

On the edge of the plate, there are gel which helps closeness of body and top. DO NOT screw them too tight.